


Here is how to set your multifunction port as a voltage trigger and to control the states:

The pinout is voltage on the tip, with ground on the sleeve of the 3.5mm cable.

1. Setup desired voltage level for appropriate multifunction port in KD-MC2500 Device Manager Software

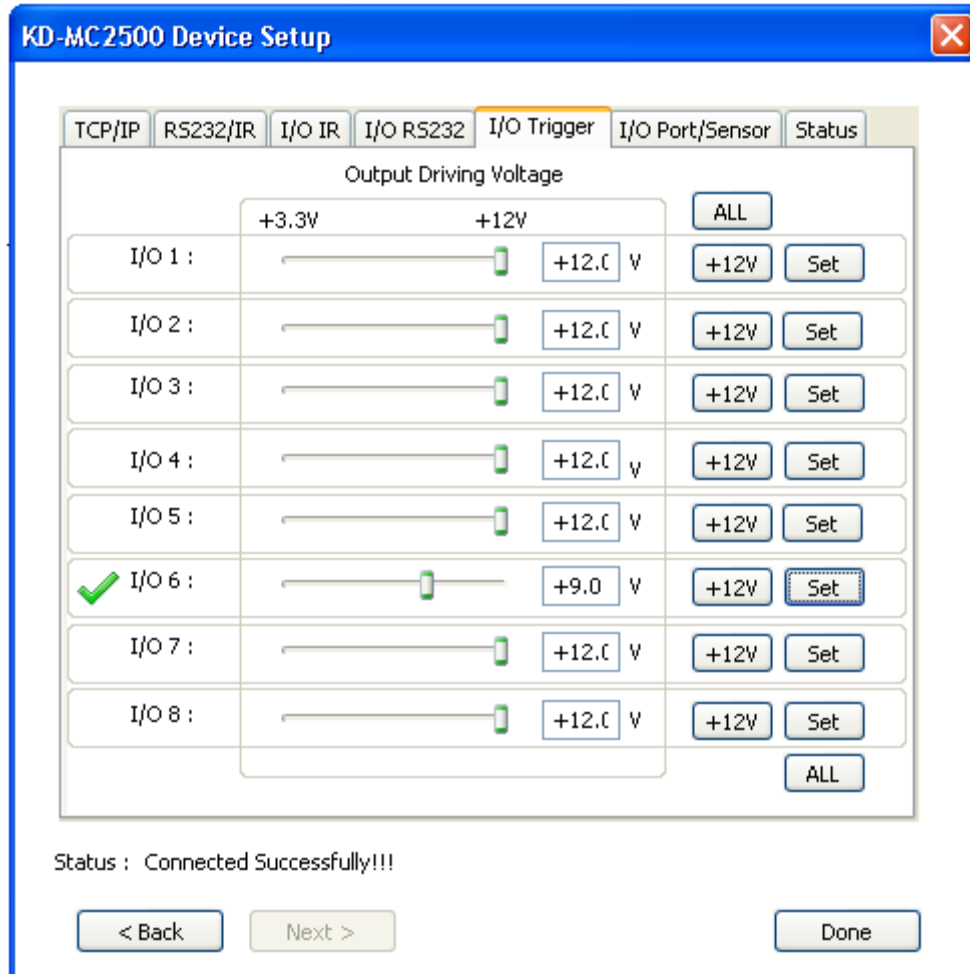

2. Setup desired multifunction port as a trigger

